User Manual

## 1. INTRODUCCIÓN

Energy Sistem® thanks you for buying your new Energy™ Soundbar 200, we wish you enjoy using it.

Amazing sound bar with audio 2.1 system and 60W real power. With multiple inputs (USB, Line-in, RCA) the best accessory for your living-room. Its 3D sourrounding sound will allow you to enjoy your films, TV, music, etc.
We recommend you to read this user manual in order to enjoy the product in a safe way and with the best results.



## 2. CARE AND MAINTENANCE

- Do not expose your Energy™ Soundbar 200 to shock, dust, humidity or high temperatures.
- Do not use cleaners or scouring agents.
- Keep the unit clean and dust with a soft, dry cloth.
- Do not disassemble the device. Any repairs must be done by qualified service personnel authorised only by Energy Sistem Soyntec SA
- Keep your Energy™ Soundbar 200 away from water or moisture, it can be harmful tdevice.
- Switch off your Energy™ Soundbar 200 when not in use.

**Battery Safety**

- Please ensure batteries are disposed of safely.
- Never dispose of batteries in a fire or with other household waste.
- Check with your local authority for disposal regulations.

## 3. TECHNICAL SPECIFICATIONS

- 2.1 soundbar system.
- RMS output power: 60W.
- Built-in subwoofer.
- USB reader compatible with storage devices up to 32 GB.
- Connections: Digital Coaxial in, RCA in, Line-In (3.5mm) and USB.
- Digital FM tuner with 20 presets
- Remote control with full functions.
- Wall mounting system.
- Standby power consuption < 0.5W.
- Frecuency response (-3dB): 150-160Hz.
- Power supply: AC 110-240V / 50-60Hz.

## 4. PACKAGE CONTENT

- Energy™ Soundbar 200 USB MP3
- Remote control.
- Audio cable.
- User manual.

## 5. GENERAL OVERVIEW

► Top view




1. Standby (on/off).
2. FUNCTION (switch function).
3. Volume.
4. Equalizer.

▸ Bottom view

5. FM Antenna
6. RCA in connectors.
7. Subwoofer output.
8. Digital input (Coaxial).

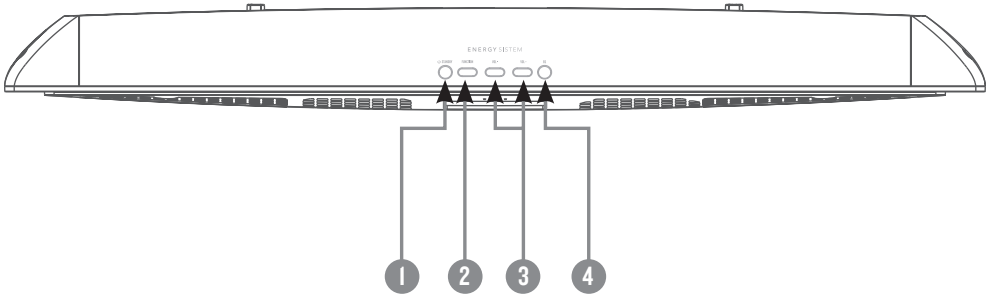


▸ Side view

9. Line-in.
10. USB port.



## ▸ Remote control

1. ON / OFF
2. PLAY / PAUSE
3. COAXIAL / AUX
4. SEARCH +
5. STOP
6. RADIO - / PREVIOUS
7. SEARCH -
8. MEMORY / REPEAT
9. VOL -
10. EQUALIZER
11. LOUD
12. MUTE
13. LINE IN
14. RADIO + / NEXT
15. TUNER / USB
16. CH - LEVEL
17. VOL +
18. MONO / STEREO
19. SCAN

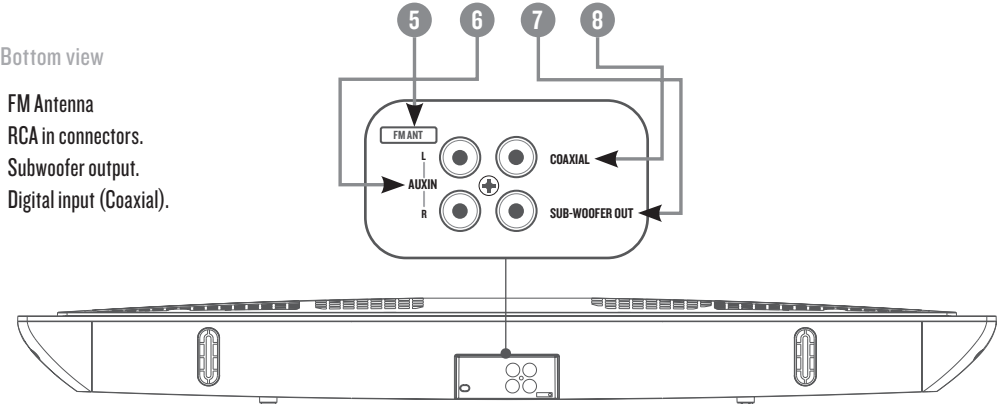

## BATTERY INSTALLATION

Remove the battery cover from the remote control and put AAA.
The following diagram shows the correct way to insert batteries.

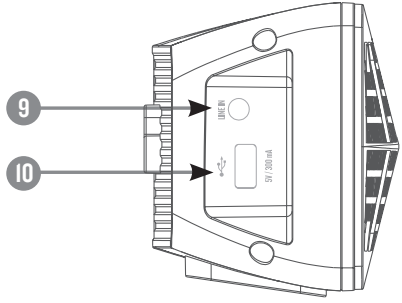


## MAIN FEATURES

- USB port.
- Digital FM radio.
- Digital audio input (coaxial).
- Line-in.
- Remote control with full fuctions.
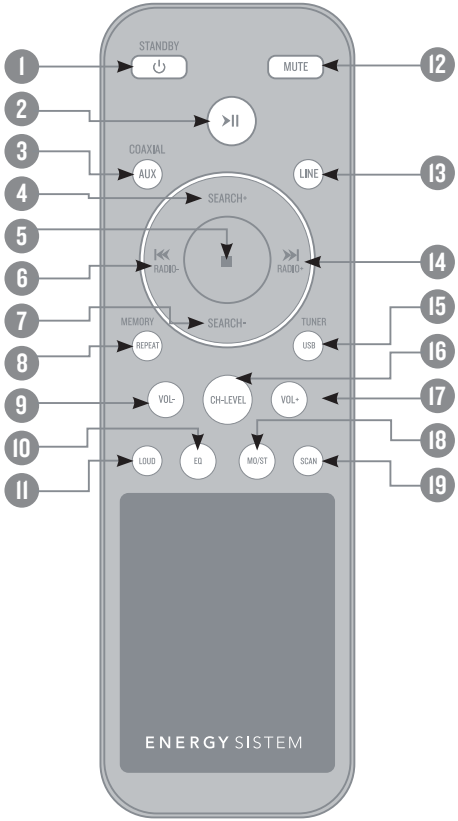
## CONNECTIONS

Your Energy™ Soundbar has different audio connections allowing you connect different audio devices as CD players, mp3 players, DVB-T, computers, Smartphones, etc.

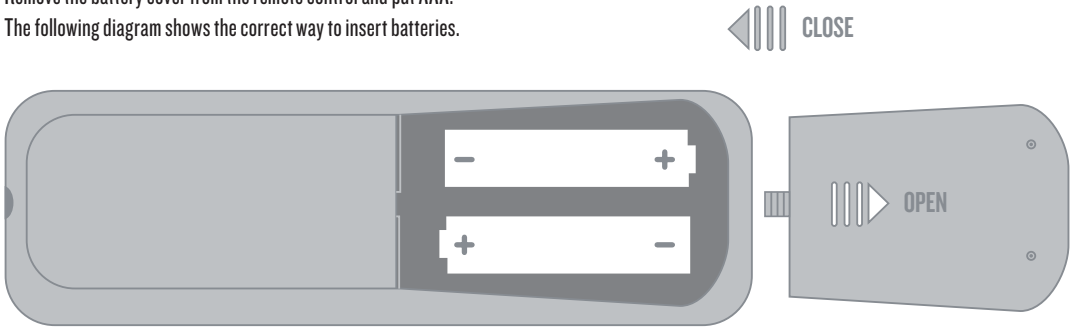

### LINE-IN

Use the audio cable (incluided) and connect it to the line-in input (jack 3.5mm) on the side of your Energy™ Soundbar and the other side of the audio cable to your audio device.
To select this function, press the FUNCTION button on the top panel of your Energy™ Soundbar to visualize "LINE IN" in the display. You can use the remote control too, pressing the [AUX]/[LINE] button and select the option.

### INPUT RCA

If your audio player has RCA outputs you can connect it to the Energy™ Soundbar using the RCA inputs and selecting the AUX option, use the FUNCTION button to find the option. You can use the remote control too, pressing the [AUX]/[LINE] button and select the option.

### COAXIAL INPUT

If your audio player has coaxial output for digital sound you can connect it to your Energy™ Soundbar, only thing you need is a coaxial cable and press FUNCTION button and select the option SPdIF in the display.

### SUBWOOFER OUT

Use a coaxial cable or RCA and connect it to the subwoofer output on the back side of your Energy™ Soundbar, now you can plug an external subwoofer to increase the bass.

## USB FUNCTION

Use the USB port to play MP3 files. You only have to plug your USB storage device and press the FUNCTION button on the top panel of your Energy™ Soundbar to find [USB] on the display. In that moment you can start to play your music through the USB.

## DIGITAL FM RADIO

From the FUNCTION button choose the TUNER option and using the remote control you can control all the radio functions. Use SEARCH + / SEARCH – buttons to tune the radios station that you wish. If you hold the SEARCH + or SEARCH – button you can do the automatic search. To use the presets, use the remote control pressing the MEMORY button, you will see on the display "FOI", use RADIO + / RADIO – to select the preset number that you want and press MEMORY again to confirm.

| | | |
|---|---|---|
| Power Suppy | | AC~110 - 240V, 50/60Hz |
| Consumption | | 60W |
| Working enviroment | Temperature | -10 ~ +35ºC |
| | Relative humedity | 5% ~ 90% |
| Turner | FM band range | Rango 87.5MHz - 108MHz |
| Output power (max) | | 15W x 2 + 30W |
| Frecuency reponse | | ± 1.5dB (20Hz ~ 20kHz) |

## WARRANTY

Energy Sistem Soyntec SA is liable for any lack of conformity which exists at the time the goods were purchased during a period of 36 months. Batteries are excluded from the 36-month warranty, having a warranty period of 12 months.

This warranty covers any defects in workmanship or materials. This warranty doesn't cover any failure of the product due to accidents, misuse or alteration made by an unauthorized person.

The special 36-months warranty is valid for the European Union. For other countries, please refer to your specific legislation or your local distributor.

## WARRANTY PROCEDURE

1. Visit the Support section at http://support.energysistem.com and select your product to view the FAQ (Frequently Asked Questions), user manuals, drivers and updates available. The solution to your problem is very likely to have been already published there. You can check the availability of the user manual in your language at **http://www.energysistem.com/es-es/support/manuals**
2. If you cannot find an appropriate solution in the Support section, you may send us your enquiry or warranty service request by email: **support@energysistem.com**
3. Alternatively, you may prefer to contact the distributor from which you purchased the product, presenting the purchase receipt or invoice.

**Important:** This warranty doesn't cover any damage or loss to any data stored in the product memory, therefore Energy Sistem's Technical Service will not assume any loss of the above mentioned information so it is recommended to make a backup of your data and to remove any data or personal info from its internal memory before you send the product, or to send it only with the original factory default values.

Specifications are subject to change without notice.

Trademarks. All companies, brands and product names are trademarks or registered trademarks of their respective companies.

© 2012 by Energy Sistem®. All rights reserved.

CE

## DECLARATION OF CONFORMITY

Manufacturer Name: Energy Sistem Soyntec S.A. 22/08/2012

Address: Pol. Ind. Finestrat, C/.Calpe, 1 - 03509, Finestrat, Alicante (Spain)

Tel: 902 388 388

Fax: 902 119 034

NIF: A53107488

We declare under our own exclusive responsibility that the product:
**Energy Sistem® Soundbar 2.1 Energy™ Soundbar 200 USB MP3**

Manufacturing country: China

Is in compliance with the essential norms and standards of the Directive 2004/108/EC of the European Parliament and of the Council of December 15th 2004.
This symbol on the product or the instructions means that your electrical and electronic equipment should be disposed at the end of life separately from your household waste. For more information, please contact the local authority or dealer where you purchased the product.